

USE 3 GUY ASSEMBLIES FOR EVERGREENS AND TREES OVER 3" CALIPER

TOP MOST ROOT IN ROOTBALL: 2"-3" ABOVE EXISTING GRADE

4" OF ORGANIC MULCH APPLIED OVER PLANTING AREA AND AWAY FROM TRUNK
MULCH TO EXTEND MINIMUM OF 18" FROM BASE OF TREE

EXISTING GRADE

BACKFILL WITH AMENDED TOPSOIL FROM HOLE

BURLAP, ROPE, AND WIRE REMOVED FROM TOP 2/3 OF ROOT BALL

INTACT ROOTBALL SITTING DIRECTLY ON TOP OF UNDISTURBED SOIL

SLOPE SIDED HOLE IS 3 TIMES AS WIDE AS THE ROOTBALL DIAMETER

PLANTING AREA SHALL BE LOOSENERD AND AERATED AT LEAST 3 TO 5 TIMES THE DIAMETER OF ROOT BALL

PRUNE ALL DEAD OR DAMAGED WOOD AFTER PLANTING

INSTALL SAUCER IN NATIVE AREAS

USE NYLON TREE STRAPS AT END OF WIRE

16 GAUGE GALVANIZED WIRE

24" x 3/4" P.V.C. MARKERS (TYPICAL) OVER WIRES

TREATED WOOD POST W/ GROMMETED NYLON STRAPS. USE 2 GUY WIRES. TREE STAKES MUST BE REMOVED AFTER ONE YEAR

WRAP TRUNK WITH PROFESSIONAL TREE WRAP IN SPECIES WITH THIN BARK. WRAP OCTOBER 15TH AND REMOVE MARCH 31ST.

DRAWN BY: GLA

APPROVED BY: RS


DATE: 12/30/09

TREE PLANTING



REV. DATE STD. DWG NO.

L-1

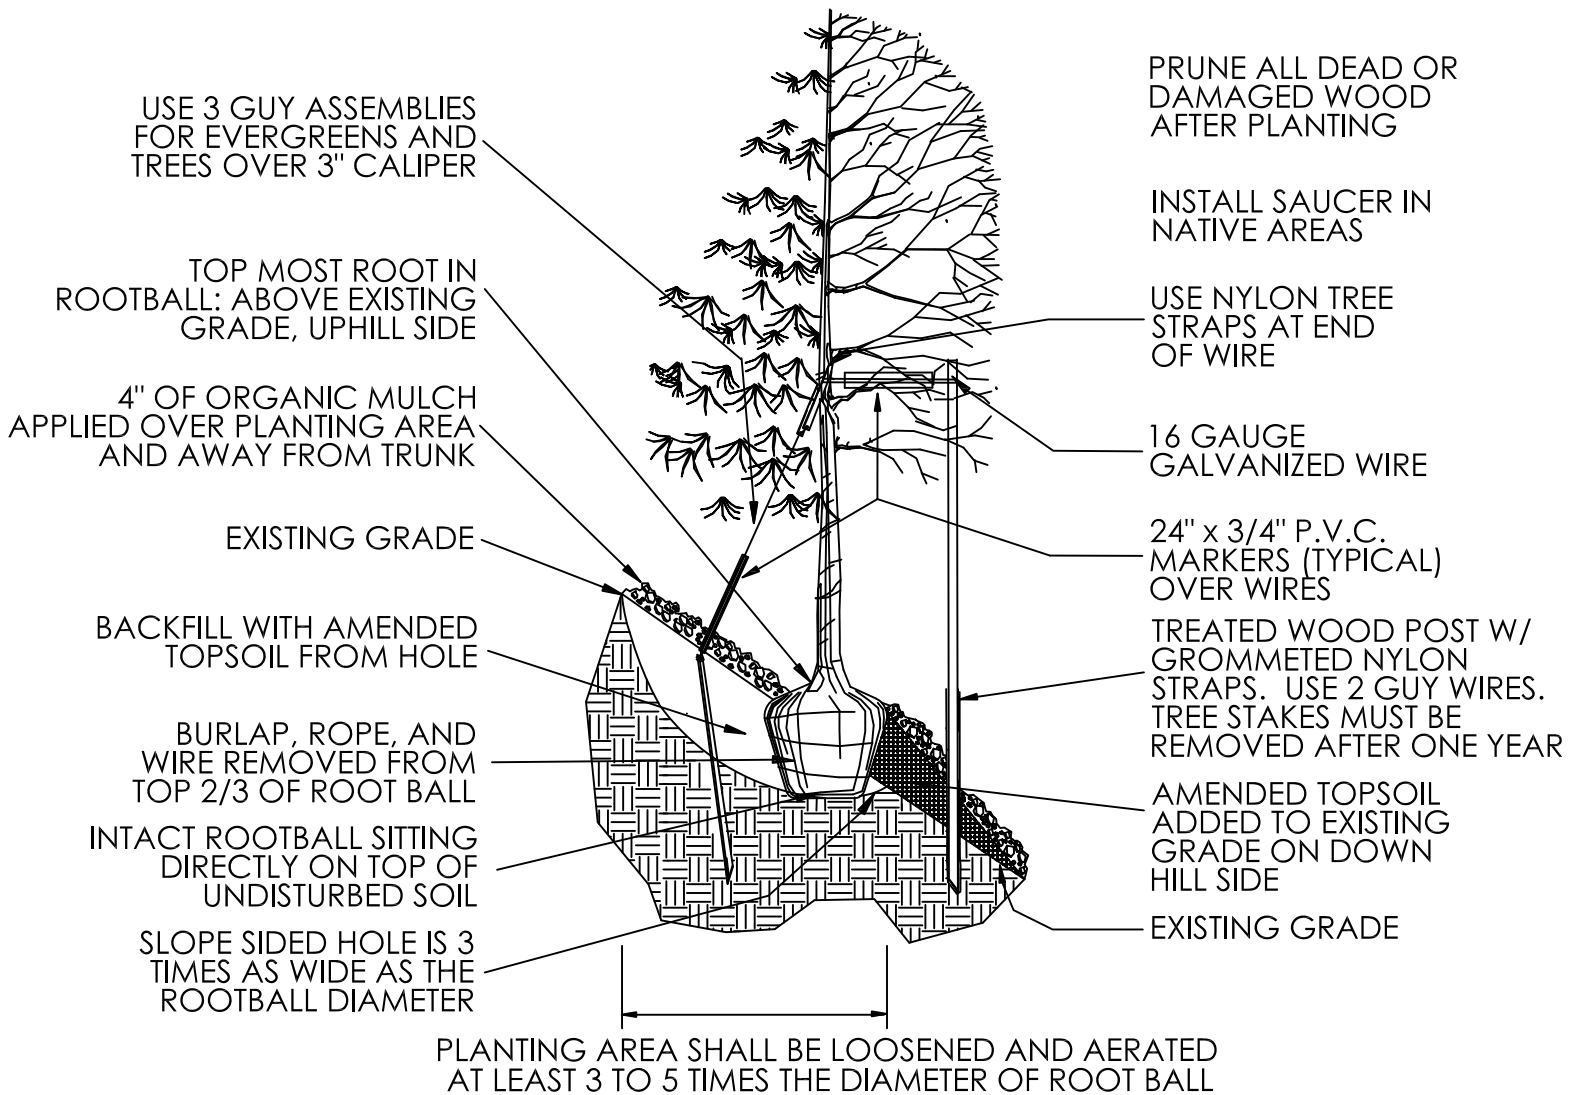

DRAWN BY: GLA
 APPROVED BY: RS
 DATE: 2/8/2008


TREE PLANTING - SLOPES



REV. DATE	STD. DWG NO.
	L-2

NOTES:

- * PRUNE ONLY DEAD OR BROKEN BRANCHES.
- * KEEP PLANTS MOIST AND SHADED UNTIL PLANTING.
- * DO NOT FERTILIZE FOR AT LEAST ONE GROWING SEASON.

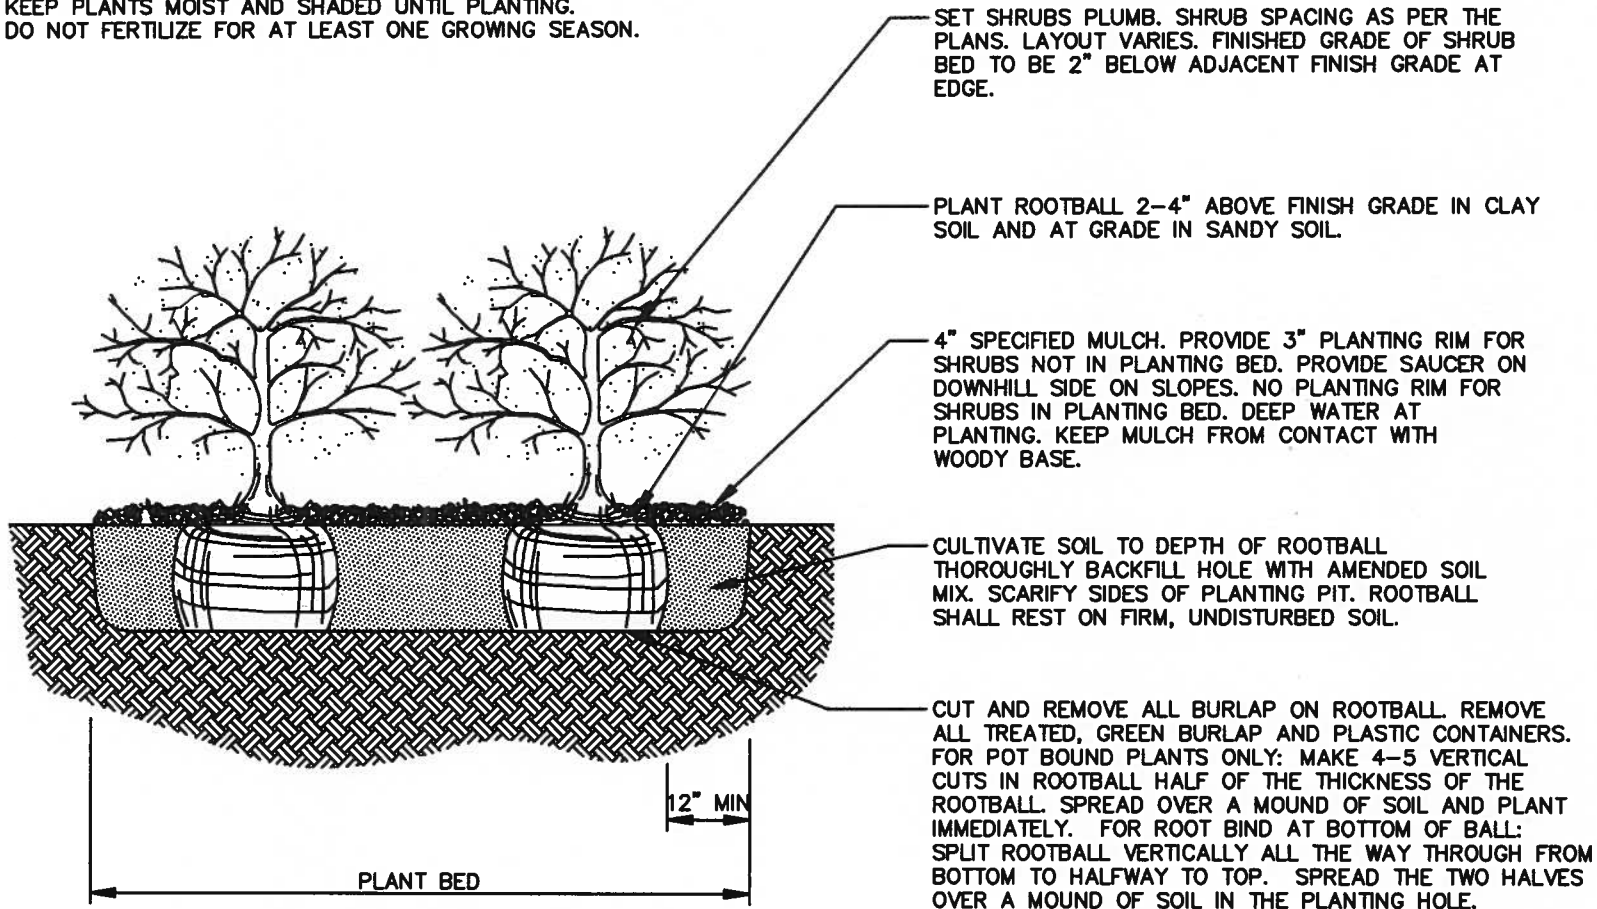

SET SHRUBS PLUMB. SHRUB SPACING AS PER THE PLANS. LAYOUT VARIES. FINISHED GRADE OF SHRUB BED TO BE 2" BELOW ADJACENT FINISH GRADE AT EDGE.

PLANT ROOTBALL 2-4" ABOVE FINISH GRADE IN CLAY SOIL AND AT GRADE IN SANDY SOIL.

4" SPECIFIED MULCH. PROVIDE 3" PLANTING RIM FOR SHRUBS NOT IN PLANTING BED. PROVIDE SAUCER ON DOWNHILL SIDE ON SLOPES. NO PLANTING RIM FOR SHRUBS IN PLANTING BED. DEEP WATER AT PLANTING. KEEP MULCH FROM CONTACT WITH WOODY BASE.

CULTIVATE SOIL TO DEPTH OF ROOTBALL THOROUGHLY BACKFILL HOLE WITH AMENDED SOIL MIX. SCARIFY SIDES OF PLANTING PIT. ROOTBALL SHALL REST ON FIRM, UNDISTURBED SOIL.

CUT AND REMOVE ALL BURLAP ON ROOTBALL. REMOVE ALL TREATED, GREEN BURLAP AND PLASTIC CONTAINERS. FOR POT BOUND PLANTS ONLY: MAKE 4-5 VERTICAL CUTS IN ROOTBALL HALF OF THE THICKNESS OF THE ROOTBALL. SPREAD OVER A MOUND OF SOIL AND PLANT IMMEDIATELY. FOR ROOT BIND AT BOTTOM OF BALL: SPLIT ROOTBALL VERTICALLY ALL THE WAY THROUGH FROM BOTTOM TO HALFWAY TO TOP. SPREAD THE TWO HALVES OVER A MOUND OF SOIL IN THE PLANTING HOLE.

Sheet Revisions	
Date	Comments



Town of Castle Rock
 100 N. Wilcox St.
 Castle Rock, CO 80104
 Phone: (720) 733-2200
 Fax: (720) 733-2217
 Development Services

SHRUB PLANTING

Issued By: Town of Castle Rock, Development Services March 31, 2010

DETAIL PLAN NO.

LS-3

Sheet 1 of 1